

INDEX - VICs (VEHICLE INSTRUCTION CARD)

SKODA VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Fabia	5 seats / 5 door hatchback / estate
4	Octavia	5 seats / 5 door hatchback / 5 door estate
5	Superb	5 seats / 5 door hatchback / 5 door estate
6	Yeti	5 seats / 5 door crossover SUV
7	Citigo	5 seats / 3-5 door hatchback
8	Rapid	5 seats / 5 door hatchback
9	Rapid Spaceback	5 seats / 5 door hatchback
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		


VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

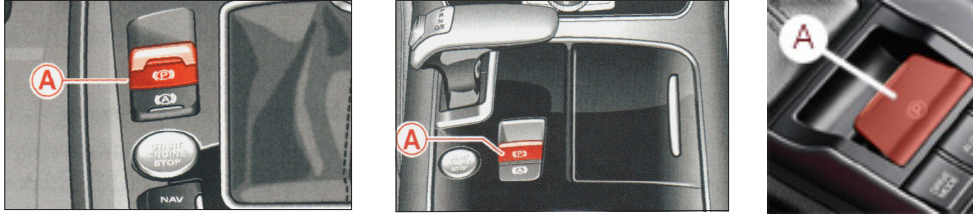

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

SAFELOCK

Safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN

Green or blue is only telling you that a system is on or operating normally.

VEHICLE INSTRUCTION CARD


For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp



To select reverse press the shift lever down before engaging gear

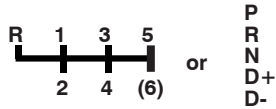

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

195/55 R15

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Some vehicles may carry a tyre repair kit in lieu of a full size or temporary spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 45.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

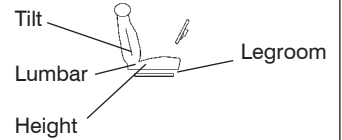

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE


- Locking the doors?** Key / remote control operated central locking. Press the central-locking switch on the driver's door. Doors auto lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening the boot?** Centrally locked. Pull remote release at right of driver's seat or use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or electric rear operated by switches in driver's door (with individual control switches on each door).
- Operating the sunroof?** If fitted - roof mounted controls are used to operate the power operated sunroof.
- Using child door locks?** Use the ignition key to twist the key slot located on the edge of the rear doors to activate it (or press the central locking switch on the driver's door). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Pull the remote release button at right of driver's seat to release it. Lift edge of the flap and twist off the cap anticlockwise. (If not centrally locked, lift the flap and unlock using the ignition key).
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the standard spare tyre or spacesaver spare (some vehicles may have a tyre repair kit in lieu of a spare wheel). The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- Driving an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

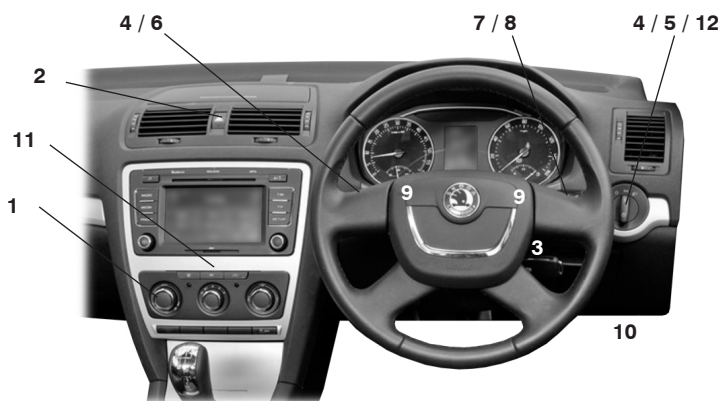

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm


- 195/65 R15
- 205/60 R15
- 205/55 R16
- 225/50 R17
- 225/45 R17
- 225/40 R18

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures. Some vehicles feature a dashboard display tyre pressure monitor.

Some vehicles may carry a tyre repair kit in lieu of a full size or temporary spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

To select reverse press the shift lever down before engaging gear

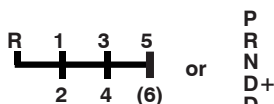

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 55.0 - 60.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

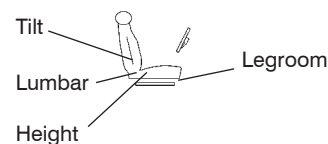

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch on the driver's door to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Remote release on hatchback. Auto-locking.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or electric rear operated by switches in driver's door.
- Operating the sunroof?** If fitted - roof operated switchgear is used to operate the electric sunroof.
- Using child door locks?** Located on the edge of the rear doors. Press the central locking switch on the driver's door to activate. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature a stop/start system which automatically stops the engine when the car is stationary, in neutral and the clutch pedal is released. The engine restarts immediately as soon as the driver presses the clutch or steps off the brake.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release button on the centre console to release it. Lift edge of the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the tyre repair kit provided in lieu of a spare wheel. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit, or phone the number on the tax disc holder for further assistance. Lower the vehicle.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-02 / 13-01-2013

SKODA OCTAVIA

5 SEATS
5 DOOR HATCHBACK / 5 DOOR ESTATE


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999


For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

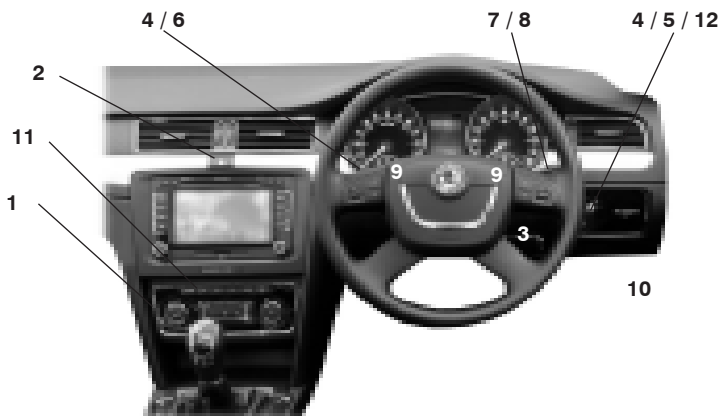

To select reverse press the shift lever down before engaging gear

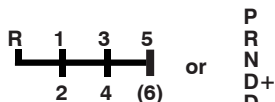

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R16
225/45 R17
225/40 R18

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Some vehicles may carry a tyre repair kit in lieu of a full size or temporary spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

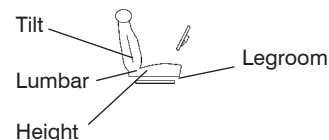

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch on the driver's door to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Remote release on hatchback, the hatchback tailgate can open as a conventional saloon or hatchback via a twinlock mode. Auto-locking. Power operated opening on estate via a button adjacent to the gear stick.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - roof operated switchgear is used to operate the electric sunroof.
- Using child door locks?** Located on the edge of the rear doors, press the central locking switch on the driver's door to activate it. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some models feature engine stop/start technology where the engine turns off when the vehicle is motionless - to restart just depress the clutch.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release to open it. Lift the edge of the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the tyre repair kit in lieu of a spare wheel. The tools and jack are also stored here. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions to use the tyre repair kit.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-04 / 30-03-2011

SKODA SUPERB

5 SEATS
5 DOOR HATCHBACK / 5 DOOR ESTATE

VEHICLE INSTRUCTION CARD


For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



To select reverse press the shift lever down before engaging gear

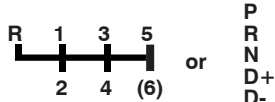

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

- 215/60 R16
- 205/55 R16
- 225/50 R17

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Most vehicles carry a tyre repair kit in lieu of a full size or temporary spare wheel. (If a spare wheel is fitted, it is found with the tools and jack beneath a false panel in the floor of the boot.)

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 55.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

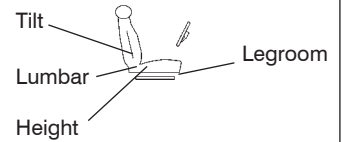

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch on the driver's door to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Remote release. Auto-locking. Power operated opening on some models via a button adjacent to the gear stick.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - roof operated switchgear is used to operate the electric sunroof.
- Using child door locks?** Located on the edge of the rear doors, press the central locking switch on the driver's door to activate it. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some models feature engine stop/start technology where the engine turns off when the vehicle is idle and motionless with the clutch released - to restart just depress the clutch (or release the brake on automatic models). Some models also feature 4WD.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release to open it. Lift the edge of the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the tyre repair kit in lieu of a spare wheel. The tools and jack are also stored here. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions to use the tyre repair kit.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. 4WD vehicles feature an offroad switch which optimises the vehicle when driving on difficult slippery surfaces. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-05 / 23-03-2012

SKODA YETI


5 SEATS
5 DOOR CROSSOVER SUV

VEHICLE INSTRUCTION CARD


For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

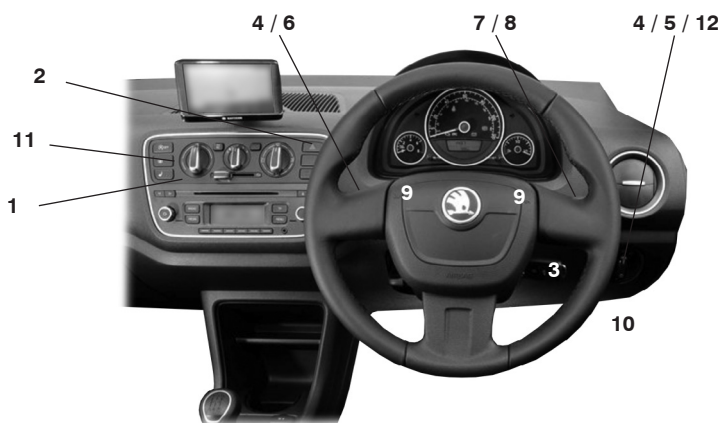

To select reverse press the shift lever down before engaging gear

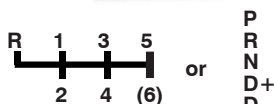

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

- 165/70 R14
- 175/65 R14
- R15 wheel option

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures. Some vehicles feature a dashboard display tyre pressure monitor.

Some vehicles may carry a tyre repair kit in lieu of a full size or temporary spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 35.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

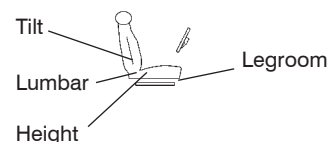

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch on the driver's door to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Remote release on hatchback. Auto-locking.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or electric rear operated by switches in driver's door.
- Operating the sunroof?** If fitted - roof operated switchgear is used to operate the electric panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors only. Press the central locking switch on the driver's door to activate. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature a stop/start system which automatically stops the engine when the car is stationary, in neutral and the clutch pedal is released. The engine restarts immediately as soon as the driver presses the clutch or steps off the brake.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release button to release it. Lift edge of the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the tyre repair kit provided in lieu of a spare wheel. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit, or phone the number on the tax disc holder for further assistance. Lower the vehicle.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-06 / 13-01-2013

SKODA CITIGO

5 SEATS
3-5 DOOR HATCHBACK

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



TYRE PRESSURES (COLD)


Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

- 185/60 R15
- 215/45 R16
- 215/40 R17

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures. Some vehicles feature a dashboard display tyre pressure monitor.

Some vehicles may carry a tyre repair kit in lieu of a full size or temporary spare wheel.

To select reverse press the shift lever down before engaging gear

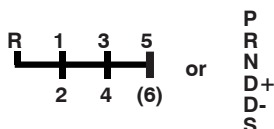

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 55.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

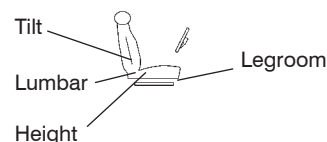

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch on the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Remote release. Auto-locking.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or electric rear operated by switches in driver's door.
- Operating the sunroof?** If fitted - roof operated switchgear is used to operate the electric panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors only. Press the central locking switch on the centre console to activate. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch (and depress clutch on manual models). Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature a stop/start system which automatically stops the engine when the car is stationary, gears in neutral and foot pedals are not depressed. The engine restarts immediately as soon as the driver presses the clutch or steps off the brake.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release button to release it. Lift edge of the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the tyre repair kit provided in lieu of a spare wheel, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit, or phone the number on the tax disc holder for further assistance. Lower the vehicle.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Use **S** for a sportier gear change. Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



TYRE PRESSURES (COLD)


Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

- 185/60 R15
- 215/45 R16
- 215/40 R17

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures. Some vehicles feature a dashboard display tyre pressure monitor.

Some vehicles may carry a tyre repair kit in lieu of a full size or temporary spare wheel.

To select reverse press the shift lever down before engaging gear

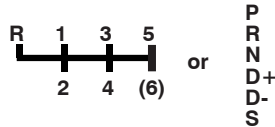

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 55.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

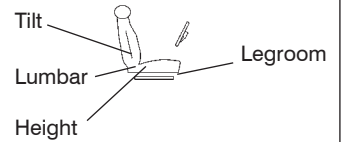

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch on the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Remote release. Auto-locking.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. (Or electric rear operated by switches in driver's door.)
- Operating the sunroof?** If fitted - roof operated switchgear is used to operate the electric panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors only. Press the central locking switch on the centre console to activate. Check from inside that the doors are securely locked. All doors auto-lock on vehicles motion.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch (and depress clutch on manual models). Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature a stop/start system which automatically stops the engine when the car is stationary, gears in neutral and foot pedals are not depressed. The engine restarts immediately as soon as the driver presses the clutch.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release button to release it. Lift edge of the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the tyre repair kit provided in lieu of a spare wheel, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit, or phone the number on the tax disc holder for further assistance. Lower the vehicle.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Use **S** for a sportier gear change. Whenever the vehicle is at a standstill apply the handbrake.